

Checking the PAD-light

This function is intended to check the PAD-light.

Now we take S80(07-) 2007 B8444S 30773346 AA (ECU Diagnostic Part Number) as an example to illustrate the operation:

Note: The highlight item in the figure indicates corresponding action.

1. step 1: S80(07-)

SELECT MENU			
S80(-06)			
S80(07-)			
S90			
V40			
V50			
V70(-00)			
V70(00-08)			
V70(08-)			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			 16:47

2. step 2: select year

SELECT MENU			
VIN			
2007			
2008			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			 16:47

3. step 3: select SRS

SELECT MENU			
ECM(Engine Control Module)			
DIESEL ENG(Fuel system/Combined system)			
TCM(Transmission Control Module)			
ABS/BCM(Anti-brake System Module)			
SRS(Supplemental Restraint System Module)			
CEM(Central electrical module)			
DIM(Driver information module)			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			16:49

4. step 4:


Select special function

If you can't find the Special Function menu, it means the function has not been developed on your vehicle. Please record the VIN (Vehicle Identification Number) and Version Information (can be read by X431 with the function: Reading off control module ID) and email to Launch (x431@cnlaunch.com). We may work out a solution on how to solve the problem.

Select function			
Reading off control module ID			
Reading off Diagnostic Trouble Codes			
Erasing Diagnostic Trouble Codes			
Parameter display			
Special Function			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			16:51

5. step 5:

Select Checking the PAD-light

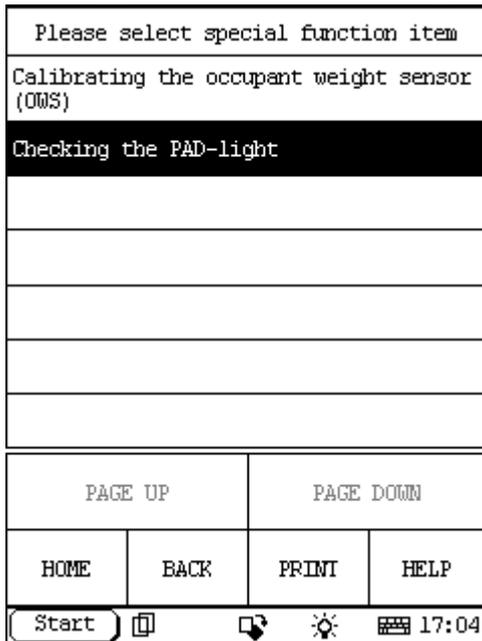

6. step 6:

The information of Checking the PAD-light:


Note! This check is only intended for vehicles equipped with either switch for airbag passenger or with occupant weight sensor (OWS).

Switch on the ignition. Wait 10 seconds.

Click the OK to activate the service.

Use the buttons to turn on or off the PAD-light.

Check visually in the vehicle that the status of the PAD-light matches the read-out value.

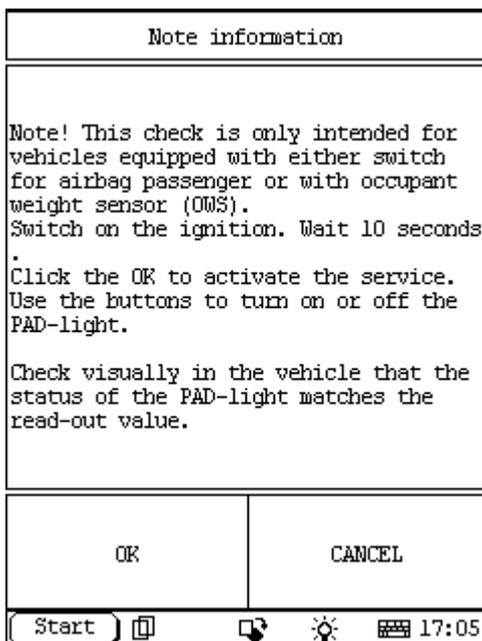

7. step 7:

Select Ok then it will send command to ECU, and display information like this:

ACTUATION TEST		
Programmed Value		Off
F1: On		
F2: Off		
PAGE UP	PAGE DOWN	PRINT
F1	F2	EXIT
Start		17:07

The first line, Programmed Value Off, is the present programmed value for your vehicle, if you want to change this value, you can select the desired value in the list:

F1: On

F2: Off

For example: if you want to change this value to On, please select F1 and it will start programming. When programming finish, the Programmed Value will change to On as the following figure, it means that the programming succeeds.

ACTUATION TEST		
Programmed Value		On
F1: On		
F2: Off		
PAGE UP	PAGE DOWN	PRINT
F1	F2	EXIT
Start		17:13

8. step 8:

When you want to exit this programming, please select EXIT:

ACTUATION TEST		
Programmed Value		On
F1: On		
F2: Off		
PAGE UP	PAGE DOWN	PRINT
F1	F2	EXIT
Start		   17:14