

Initialize the window

This function is intended to initialize the window.

Now we take S60 2001 09452839 A (ECU Diagnostic Part Number) as an example to illustrate the operation:

Note: The highlight item in the figure indicates corresponding action.

1. step 1: S60

SELECT MENU			
850			
960			
C70 Coupe			
C70 Conv			
S40(-04)			
S40(04-)			
S60			
S70			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start	☐	☐	☐ 16:16

2. step 2: select year

SELECT MENU			
VIN			
2001			
2002			
2003			
2004			
2005			
2006			
2007			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start	☐	☐	☐ 16:16

3. step 3: select PDM

SELECT MENU			
UEM(Up electrical module)			
REM(Rear electrical module)			
DIM(Driver information module)			
PDM(Passenger door module)			
PSM(Power seat module)			
DDM(Driver door module)			
CCM(Climate control module)			
PHM(Phone module)			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			16:55

4. step 4:


Select: Special Function.

If you can't find the Special Function menu, it means the function has not been developed on your vehicle. Please record the VIN (Vehicle Identification Number) and Version Information (can be read by X431 with the function: Reading off control module ID) and email to Launch (x431@cnlaunch.com). We may work out a solution on how to solve the problem.

Select function			
Reading off control module ID			
Reading off Diagnostic Trouble Codes			
Reading off extended diagnostic trouble code(DTC) information			
Erasing Diagnostic Trouble Codes			
Parameter display			
Activating components/functions			
Special Function			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			16:17

5. step 5:

Select: Initialize the window

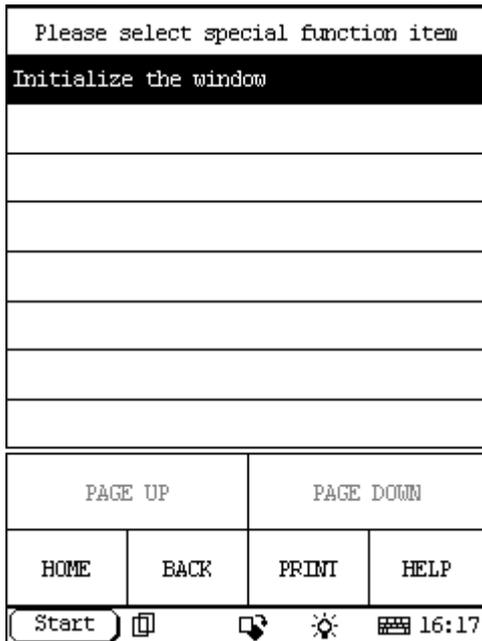

6. step 6:

The information of Initialize the window:


-Ignition on

Move the window to its upper limit position using manual control.

Initialize the window.

From model year 2003 inclusive, the window will lower approximately 10 centimeters and then close again during initialization.

Verify the repair by running the window up and down manually

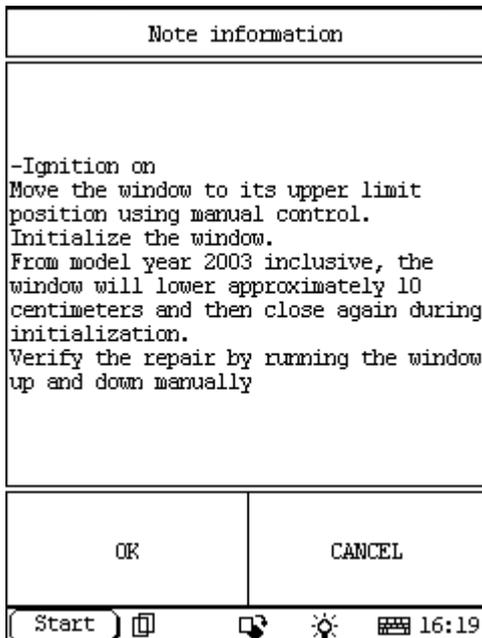

7. step 7:

Select Ok then it will send command to ECU, and display information like this:

ACTUATION TEST		
Passenger Window	Not initialized	
Driver Window	Not initialized	
F1:Initiate passenger window (PDM)		
F2:Initiate driver window (DDM)		
PAGE UP	PAGE DOWN	PRINT
F1	F2	EXIT
Start     16:50		

The 2 lines on the screen upper, "Passenger Window Not initialized; Driver Window Not initialized", is the present programmed value for your vehicle, if you want to change this value, you can select the desired value in the list:

F1: Initiate passenger window (PDM)

F2: Initiate driver window (DDM)

For example: if you want to initiate driver window (PDM), please select F1 and it will start programming. When programming finish, the Programmed Value will change to Initialized as the following figure, it means that the programming succeeds.

ACTUATION TEST		
Passenger Window	Initialized	
Driver Window	Not initialized	
F1:Initiate passenger window (PDM)		
F2:Initiate driver window (DDM)		
PAGE UP	PAGE DOWN	PRINT
F1	F2	EXIT
Start     16:49		

8. step 8:

When you want to exit this programming, please select EXIT:

ACTUATION TEST		
Passenger Window	Not initialized	
Driver Window	Not initialized	
F1:Initiate passenger window (PDM)		
F2:Initiate driver window (DDM)		
PAGE UP	PAGE DOWN	PRINT
F1	F2	EXIT
Start		   16:53