




Programming text message, seatbelt reminder

It is possible to change triggering conditions for the function for the seatbelt reminder's audible signal. The alternatives are activating or deactivating when closing front door pair and activating or deactivating when closing rear door.




Now we take S40(04-) 2008 30786352 AD (ECU Diagnostic Part Number) as an example to illustrate the operation:

Note: The highlight item in the figure indicates corresponding action.




1. step 1: S40(04-)

SELECT MENU			
850			
960			
C70 Coupe			
C70 Conv			
S40(-04)			
S40(04-)			
S60			
S70			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			 10:25

2. step 2: select year

SELECT MENU			
VIN			
2004			
2005			
2006			
2007			
2008			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			 10:26




3. **step 3:** select DIM

SELECT MENU			
DIM(Driver information module)			
PDM(Passenger door module)			
PSM(Power seat module)			
DDM(Driver door module)			
CCM(Climate control module)			
PHM(Phone module)			
SWM(Steering wheel module)			
AUD(Audio Module)			
PAGE UP		PAGE DOWN	
HOME	BACK	PRIMI	HELP
Start			 10:27

4. **step 4:**

Select: Special Function.

If you can't find the Special Function menu, it means the function has not been developed on your vehicle. Please record the VIN (Vehicle Identification Number) and Version Information (can be read by X431 with the function: Reading off control module ID) and email to Launch (x431@cnlaunch.com). We may work out a solution on how to solve the problem.

Select function			
Reading off control module ID			
Reading off Diagnostic Trouble Codes			
Erasing Diagnostic Trouble Codes			
Parameter display			
Activating components/functions			
Service Reset			
Special Function			
PAGE UP		PAGE DOWN	
HOME	BACK	PRIMI	HELP
Start			 10:28

5. **step 5:**

Select: Programming text message, seatbelt reminder

Please select special function item			
Programming the units for the trip computer			
Programming parking brake warning			
Programming the audible acknowledgement signal, seat belt reminder			
Programming instrument lighting			
Programming text message, seatbelt reminder			
Read out programmed values			
Display of DSTC message			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			14:32

6. step 6:

The information of Programming text message, seatbelt reminder:

Ignition on.

It is possible to change triggering conditions for the function for the seatbelt reminder's audible signal. The alternatives are activating or deactivating when closing front door pair and activating or deactivating when closing rear door.

Read off the parameter that is programmed.

To change the Value, mark the desired value in the list and start programming.

Note information	
<p>Ignition on.</p> <p>It is possible to change triggering conditions for the function for the seatbelt reminder's audible signal. The alternatives are activating or deactivating when closing front door pair and activating or deactivating when closing rear door.</p> <p>Read off the parameter that is programmed.</p> <p>To change the Value, mark the desired value in the list and start programming.</p> <p>.</p>	
OK	CANCEL
Start	14:35

7. step 7:




Select OK, then it will display two Item functions:

Front Door

Rear Door

Please select one that you want to program.



If you select Front Door, the operation is step 8 to step 9; else the operation is: step 10 to step 11.

Please select special function item			
Front Door			
Rear Door			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			 14:38

8. step 8:

When you select Front Door

It will send command to ECU, and display information like this:

ACTUATION TEST		
Programmed Value	Started	
F1: Sound Signal triggered by Front Door = Started		
F2: Sound Signal triggered by Front Door = Not started		
PAGE UP	PAGE DOWN	PRINT
F1	F2	EXIT
Start		 14:40

The first line, Programmed Value Started, is the present programmed value for your vehicle, if

you want to change this value, you can select the desired value in the list:

F1: Sound Signal triggered by Front Door = Started

F2: Sound Signal triggered by Front Door = Not started

For example: if you want to change this value to Not started, please select F1 and it will start programming. When programming finish, the Programmed Value will change to Not started as the following figure, it means that the programming succeed.

ACTUATION TEST		
Programmed Value		Not started
F1: Sound Signal triggered by Front Door = Started		
F2: Sound Signal triggered by Front Door = Not started		
PAGE UP	PAGE DOWN	PRINT
F1	F2	EXIT
Start		15:10

9. step 9:





When you want to exit this programming, please select EXIT:

ACTUATION TEST		
Programmed Value		Not started
F1: Sound Signal triggered by Front Door = Started		
F2: Sound Signal triggered by Front Door = Not started		
PAGE UP	PAGE DOWN	PRINT
F1	F2	EXIT
Start		15:11

10. step 10:

When you select Rear Door

It will send command to ECU, and display information like this:





ACTUATION TEST		
Programmed Value Started		
F1: Sound Signal triggered by Rear Door = Started		
F2: Sound Signal triggered by Rear Door = Not started		
PAGE UP	PAGE DOWN	PRINT
F1	F2	EXIT
<div>Start     15:17</div>		

The first line, Programmed Value Started, is the present programmed value for your vehicle, if you want to change this value, you can select the desired value in the list:

F1: Sound Signal triggered by Rear Door = Started





F2: Sound Signal triggered by Rear Door = Not started

For example: if you want to change this value to Not started, please select F2 and it will start programming. When programming finish, the Programmed Value will change to Not started as the following figure, it means that the programming succeed.

ACTUATION TEST		
Programmed Value Not started		
F1: Sound Signal triggered by Rear Door = Started		
F2: Sound Signal triggered by Rear Door = Not started		
PAGE UP	PAGE DOWN	PRINT
F1	F2	EXIT
<div>Start     15:19</div>		

11. step 11:

When you want to exit this programming, please select EXIT:

ACTUATION TEST		
Programmed Value		Not started
F1: Sound Signal triggered by Rear Door = Started		
F2: Sound Signal triggered by Rear Door = Not started		
PAGE UP	PAGE DOWN	PRINT
F1	F2	EXIT
Start	    15:19	