

Read out programmed values

This function is intended to read off the customer's settings.

Now we take S40(04-) 2008 30786352 AD (ECU Diagnostic Part Number) as an example to illustrate the operation:

Note: The highlight item in the figure indicates corresponding action.

1. step 1: S40(04-)

SELECT MENU			
850			
960			
C70 Coupe			
C70 Conv			
S40(-04)			
S40(04-)			
S60			
S70			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start	□	☑	☼ 10:25

2. step 2: select year

SELECT MENU			
VIN			
2004			
2005			
2006			
2007			
2008			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start	□	☑	☼ 10:26

3. step 3: select DIM

SELECT MENU			
DIM(Driver information module)			
PDM(Passenger door module)			
PSM(Power seat module)			
DDM(Driver door module)			
CCM(Climatc control module)			
PHM(Phone module)			
SWM(Steering wheel module)			
AUD(Audio Module)			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			 10:27

4. step 4:

Select: Special Function.

If you can't find the Special Function menu, it means the function has not been developed on your vehicle. Please record the VIN (Vehicle Identification Number) and Version Information (can be read by X431 with the function: Reading off control module ID) and email to Launch (x431@cnlaunch.com). We may work out a solution on how to solve the problem.

Select function			
Reading off control module ID			
Reading off Diagnostic Trouble Codes			
Erasing Diagnostic Trouble Codes			
Parameter display			
Activating components/functions			
Service Reset			
Special Function			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			 10:28

5. step 5:

Select: Read out programmed values

Please select special function item			
Programming the units for the trip computer			
Programming parking brake warning			
Programming the audible acknowledgement signal, seat belt reminder			
Programming instrument lighting			
Programming text message, seatbelt reminder			
Read out programmed values			
Display of DSTC message			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			15:42

6. step 6:

The information of Read out programmed values:

Hint: If the instrument speedometer is from 0-260, the instrument is intended for kilometers.

If the gauge is from 0-160, it is intended for miles.

Note information			
Hint: If the instrument speedometer is from 0-260, the instrument is intended for kilometres. If the gauge is from 0-160, it is intended for miles.			
OK	CANCEL		
Start			15:43

7. step 7:

Select OK, then it will display two Item functions:

Km

Miles

Please select one that you want to program according to the instrument speedometer on the vehicle.

If you select Km, the operation is step 8 to step 10; else the operation is: step 11 to step 13.

Please select special function item			
Km			
Miles			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start	☐	☑	☼ 13:54

8. step 8:

When you select Km.

It will display some information about Km programming like this:

Ignition on.

When downloading software or replacing the combined instrument panel it is important to read off the customer's settings. This is so that the same data can be programmed again into the new combined instrument panel.

Read off and note the customer settings..

To program the customer settings again, see Programming the driver information module (DIM).

Note information	
<p>Ignition on. When downloading software or replacing the combined instrument panel it is important to read off the customer's settings. This is so that the same data can be programmed again into the new combined instrument panel.</p> <p>Read off and note the customer settings .. To program the customer settings again , see Programming the driver information module (DIM).</p>	
OK	CANCEL
Start	☐ ☑ ☼ 15:46

9. step 9:

Select Ok then it will send command to ECU, and display information like this:

What displayed is your vehicle's setting.

ACTUATION TEST		
Distance condition for service km	20000 km	
Time condition for service	12 month	
Engine time condition for service	750 hours	
Temperature unit	Celsius	
Trip computer unit	Litre	
Parking Brake Warning	On	
Belt reminder	Off	
PAGE UP	PAGE DOWN	PRINT
EXIT		
Start		   15:47

10. step 10:

When you want to exit this read out, please select EXIT:

ACTUATION TEST		
Distance condition for service km	20000 km	
Time condition for service	12 month	
Engine time condition for service	750 hours	
Temperature unit	Celsius	
Trip computer unit	Litre	
Parking Brake Warning	On	
Belt reminder	Off	
PAGE UP	PAGE DOWN	PRINT
EXIT		
Start		   15:50

11. step 11:

When you select Miles.


It will display some information about Miles programming like this:

Ignition on.

When downloading software or replacing the combined instrument panel it is important to read off the customer's settings. This is so that the same data can be programmed again into the new combined instrument panel.

Read off and note the customer settings..


To program the customer settings again, see Programming the driver information module (DIM).

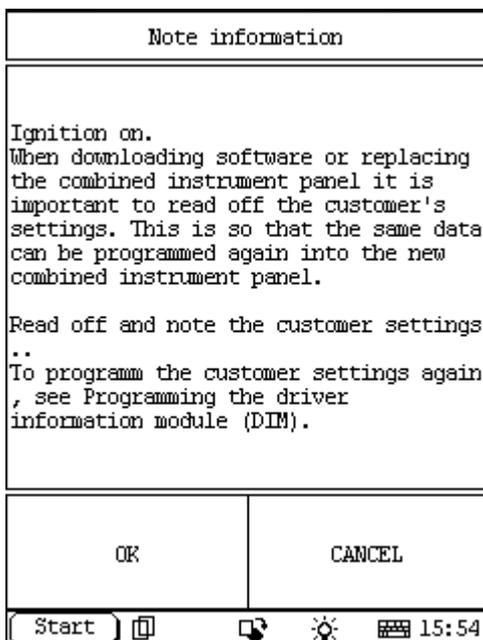

12. step 12:

Select Ok then it will send command to ECU, and display information:

This value is your vehicle's setting.

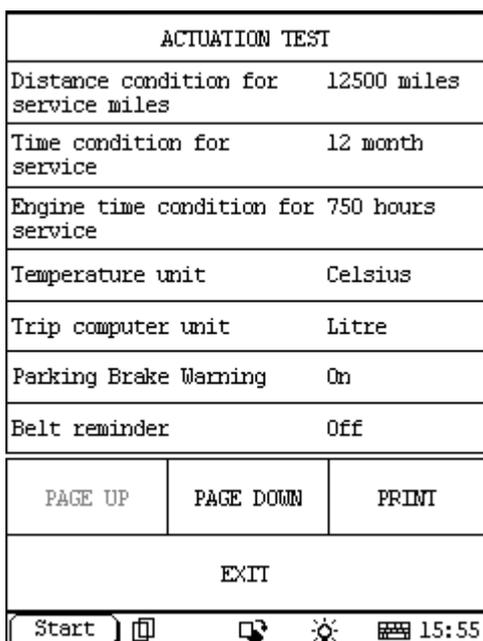

13. step 13:

When you want to exit this read out, please select EXIT:

ACTUATION TEST		
Distance condition for service miles	12500 miles	
Time condition for service	12 month	
Engine time condition for service	750 hours	
Temperature unit	Celsius	
Trip computer unit	Litre	
Parking Brake Warning	On	
Belt reminder	Off	
PAGE UP	PAGE DOWN	PRINT
EXIT		
Start		   15:58