


## Resetting low voltage counters

The function is intended to read off and reset the low voltage counters.


Now we take XC90 2006 30728579 AA (ECU Diagnostic Part Number) as an example to illustrate the operation:

Note: The highlight item in the figure indicates corresponding action.


### 1. step 1: XC90

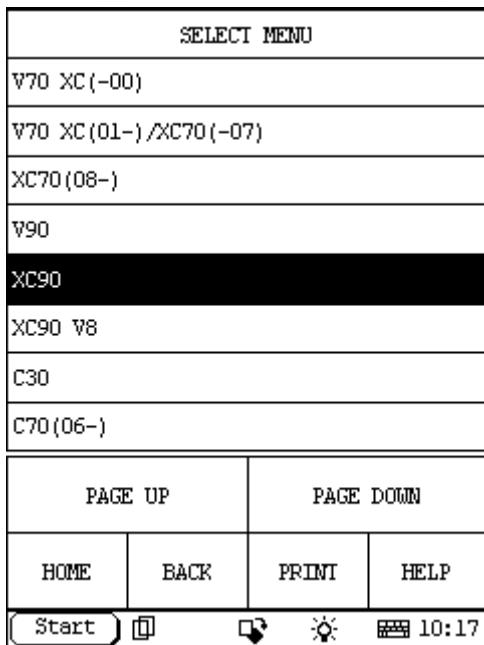

### 2. step 2: select year

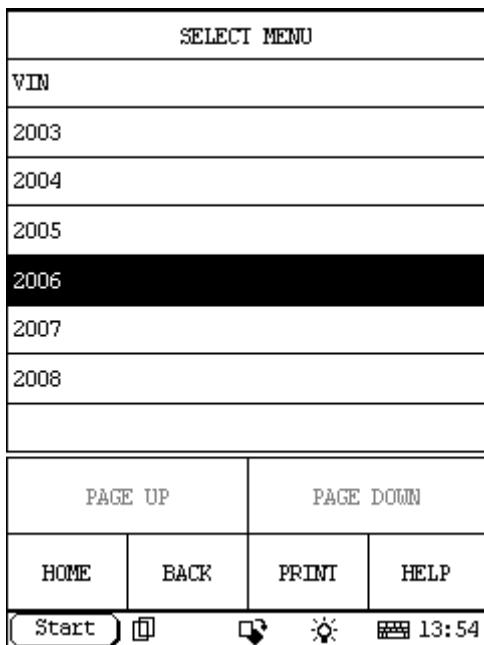


**3. step 3:** select CEM

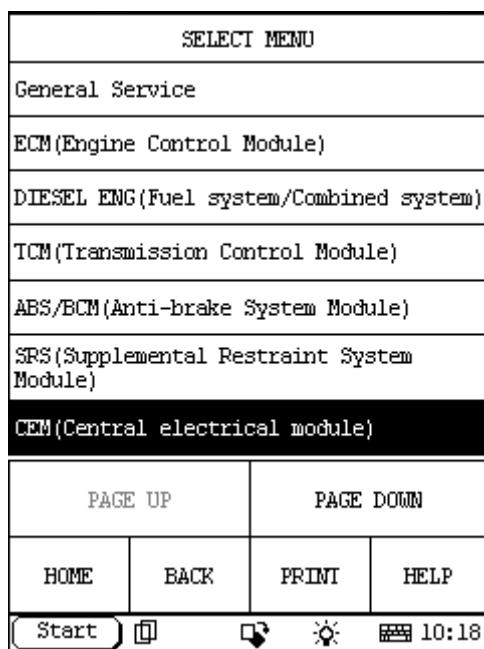

**4. step 4:**


Select: Special Function.

If you can't find the Special Function menu, it means the function has not been developed on your vehicle. Please record the VIN (Vehicle Identification Number) and Version Information (can be read by X431 with the function: Reading off control module ID) and email to Launch (x431@cnlaunch.com). We may work out a solution on how to solve the problem.

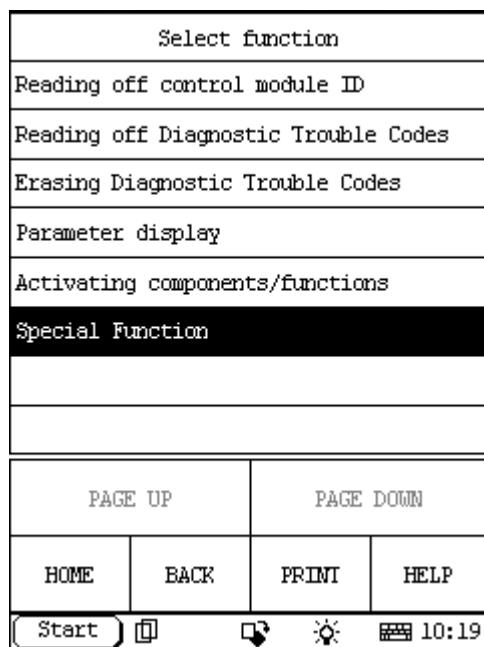

**5. step 5:**

Select: Resetting low voltage counters

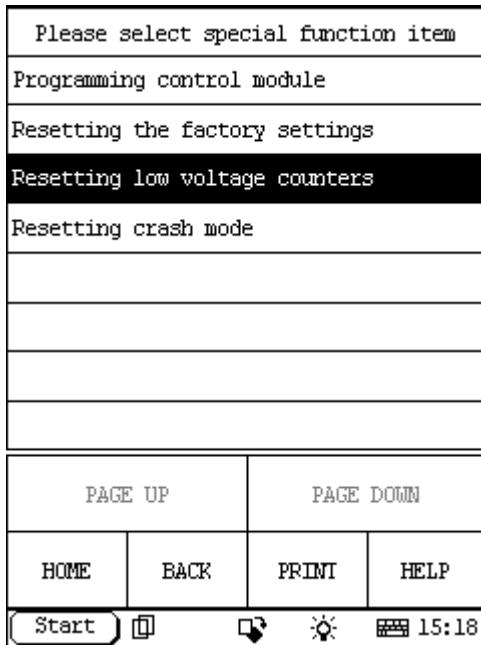

## 6. step 6:

The information of Resetting low voltage counters:


Hint: The central electronic module (CEM) has integrated counters for the vehicle's voltage levels. Two counters store information - one counts how many times voltage is low while the other counts how many times voltage is so low that vehicle functions are deactivated. The voltage level of each counter depends on battery temperature and current consumption in the vehicle. The counters are updated when voltage is low for more than approx. 2 minutes. The updated values can be read once they have been stored in the central electronic module (CEM). This is done after the ignition has been switched off and the key removed for approx. 30 minutes. Deactivated functions can include the ventilation fan and the infotainment system. For more information see "Design and Function, Central Electronic Module (CEM)". Functions are automatically deactivated in order to ensure that there is sufficient battery output to start the vehicle. A text message appears in the display when voltage is low.

Caution! The counters should only be reset when the battery is being replaced or has recently been replaced.

Ignition on.


Read and reset the counters by clicking the OK.

Hint: If a customer complains that the text message for low voltage is displayed often or that the infotainment system, for example, switches off, reading these counters could serve to confirm this and indicate how many times it has happened.

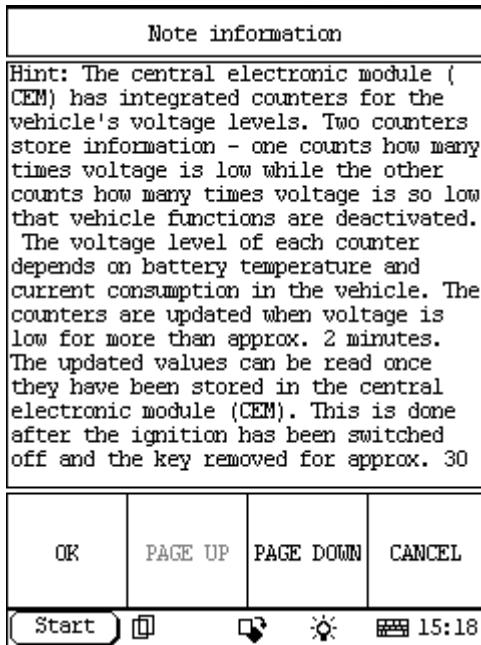

#### 7. step 7:

Select Ok then it will send command to ECU, and display information like this:

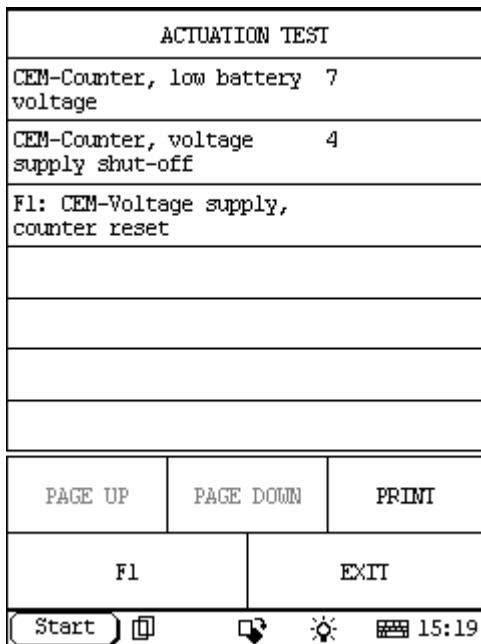

If you want to reset low voltage counters, please select F1.

#### 8. step 8:

When you want to exit this programming, please select EXIT:

ACTUATION TEST		
CEM-Counter, low battery 7 voltage		
CEM-Counter, voltage 4 supply shut-off		
F1: CEM-Voltage supply, counter reset		
PAGE UP	PAGE DOWN	PRINT
F1	EXIT	
Start	□	✖ ☀ ☁ 15:23